

Tools Required



Seam roller, level, pencil, smooth brush, tape measure, ruler, mohair short hair roller, cloth and craft knife.

Measures

1. Draw a plumb line (vertical line) at the mark with a level.
2. This is your guide where your two strips of Series R roll will meet.

Application

1. Packaged rolls and adhesive must be acclimated at work in a dry, well-ventilated area for a minimum of 48 hours.
2. Remove the rolls from packaging just before starting the installation.
3. During installation, maintain temperature and R.H. to consistent level with the conditions that will prevail when building is occupied.
4. This means keeping the temperature range of 18 °C to 28 °C (65 °F to 82°F) and the R.H. range from 35% to 65%.
5. Install Divina Series R using Thomsit K188E.
6. For the correct application follow the instructions on the adhesive packaging label, very carefully, as well as information from technical data sheets.
7. Check the size of the wall by measuring from the line vertical line to the corner.
8. Ensure that the widths of the rolls that are near the corners are identical or greater than 5 cm.

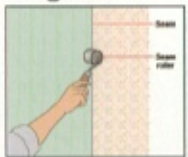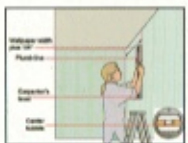

9. If necessary, repeat the previous step, drawing new line parallel to the first one.
10. Stir the adhesive before use.
11. Apply the adhesive Thomsit K188E with short hair mohair roller.
12. Avoid pooling of adhesive.
13. Coverage must be 200-250g/sqm.
You can check that the adhesive is dry when the film turns into a transparent-yellow color, meaning that the water has evaporated from the adhesive
14. Carefully align the first roll to the marked plumb line.
15. Do not apply too much pressure when installing the rolls in place, so you will be able to remove if necessary.
16. When the roll is in place, press with your hands to ensure that all parts are in contact with the adhesive on the wall.
17. Go with the brush over the entire area of the roll
18. Then use the seam roller to ensure that the roll is fixed to the wall.
19. Proceed the same way with the next rolls.



ABOUT GLUE

- Drying time Thomsit K188E: 30 to 50 minutes.
- Open time Thomsit K188E: 20 to 30 minutes.
- High temperatures and low RH will shorten the time.
- Low temperatures and high RH will extend the time.